 


# Dimplex

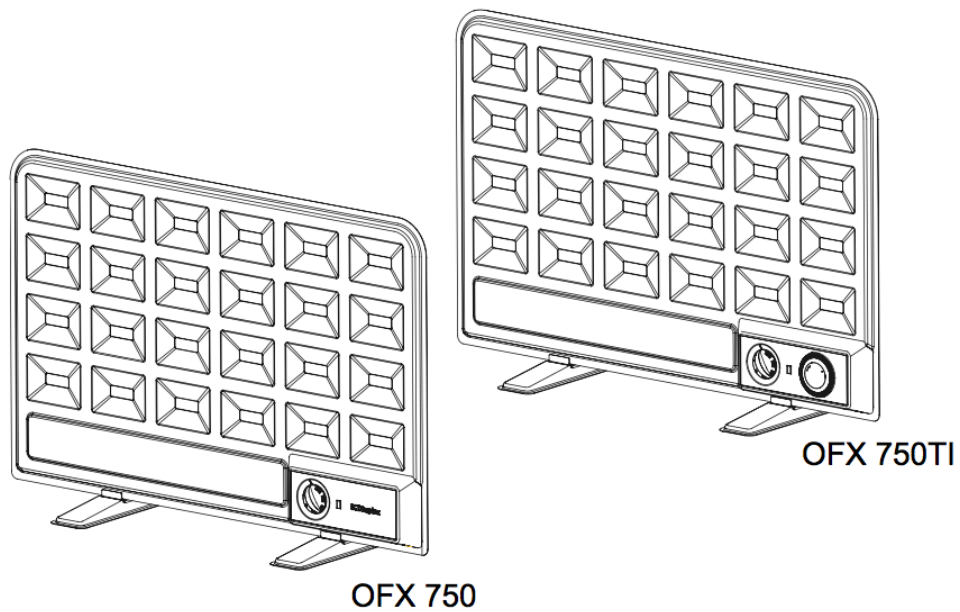 


Oil filled Radiators - Models : OFX750/1000/1500 & OFX750TI/1000TI/1500TI


1

**Dimensions**  
(millimetres)

Models	Watts	A	B	C	D
OFX750/OFX750TI	0.75kw	741	500	230	393
OFX1000/OFX1000TI	1.0kw	854	586	230	506
OFX1500/OFX1500TI	1.5kw	1084	670	230	736

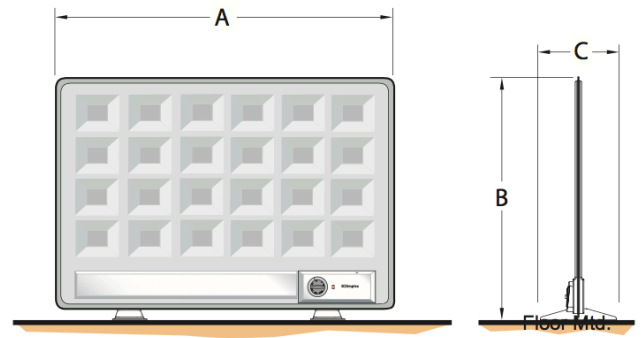


2

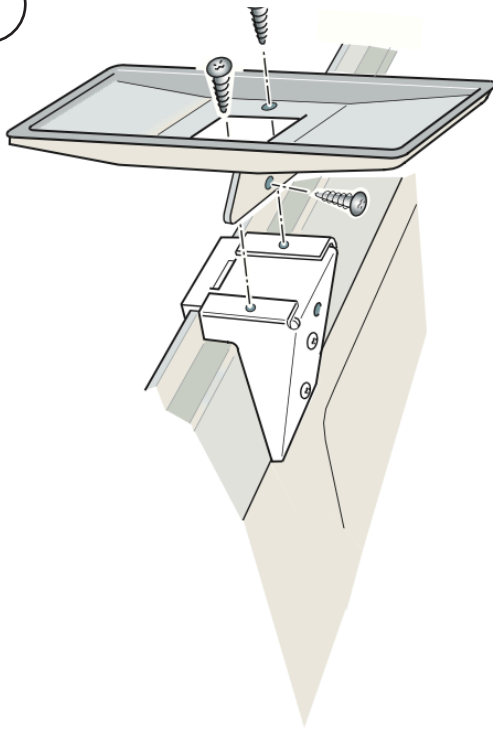 


3

 OFX750/1000/1500

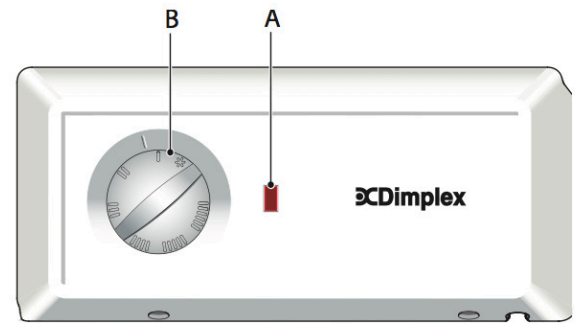

4

 OFX750TI/1000TI/1500TI

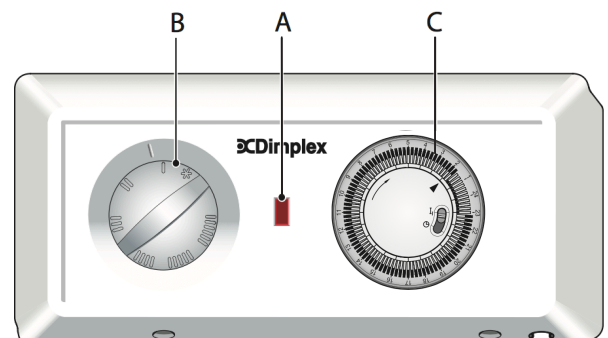


5

OFX750TI/1000TI/1500TI



 6

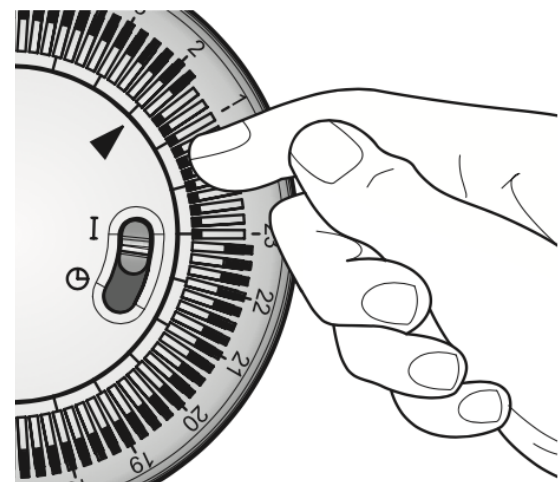

## IMPORTANT SAFETY ADVICE

**WARNING:** The heater should only be used on a horizontal and stable surface with the feet securely fitted.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

**WARNING:** In order to avoid overheating, do not cover the heater.

**DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

**IMPORTANT:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING - DO NOT USE THIS APPLIANCE IN A BATHROOM.**

**DO NOT COVER THE RADIATOR** or place material or garments on it, or obstruct the air circulation around the heater, for example with curtains or furniture, as this could cause overheating and a fire risk.

**DO NOT** use the heater if it has been dropped or damaged, contact our Customer Helpline for further advice.

**DO NOT** use the heater if it develops an oil leak. Unplug the heater and contact your supplier or our Customer Helpline. If the heater is tipped over, unplug it and allow it to cool before standing it back upright.

**DO ENSURE** that the mains lead cannot be tripped over.

**DO NOT** operate the heater with the mains lead overhanging the heated surfaces.

## Electrical connection

### WARNING – THIS APPLIANCE MUST BE EARTHED

This heater must be used on an **AC** ~ supply only and the voltage marked on the heater must correspond to the supply voltage. This heater is fitted with a rewirable plug incorporating a 13 amp fuse. In the event of replacing the fuse in the plug supplied, a 13 amp fuse approved by ASTA to BS 1362 must be used. If any other type of plug is used, a 15 amp fuse must be fitted in the plug, the adaptor, or at the distribution board.

**IMPORTANT :** If the plug is not suitable for your socket, the 13 amp plug should be removed.

Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code :

<b>GREEN AND YELLOW :</b>	<b>EARTH</b>
<b>BLUE :</b>	<b>NEUTRAL</b>
<b>BROWN :</b>	<b>LIVE</b>

Connect the **GREEN AND YELLOW** wire to the terminal marked 'E' or by the earth symbol  , or coloured **GREEN** or **GREEN AND YELLOW**.

Connect the **BROWN** wire to the terminal marked 'L' or coloured **RED**.

Connect the **BLUE** wire to the terminal marked 'N' or coloured **BLACK**.

## Preparation for Use

The heater may only be used free standing on feet. The heater should only be operated when in the upright position as shown in Fig. 1.

**WARNING - THIS HEATER MUST ONLY BE USED IN THE UPRIGHT POSITION ON A HORIZONTAL AND STABLE SURFACE WITH THE FEET SECURELY FITTED.**

**THIS RADIATOR MUST NOT BE LOCATED IMMEDIATELY BELOW A FIXED SOCKET OUTLET.**

## Free standing on feet

**Never** use the radiator free standing without the feet fitted.

Lay the radiator on its front and offer each foot up to its mounting bracket, as shown in **Fig. 2**. Fix each foot using the three screws provided and tighten them fully.

Stand the radiator on its feet and place it in position ready for use.

**WARNING - Do not use the heater on deep pile carpets or the long hair type of rugs. Keep combustible materials such as drapes and other furnishings clear from the front, sides and rear of the heater. Do not use the heater to dry your laundry.**

**Please Note:** Although this heater is manufactured to comply with the relevant safety standards, certain types of carpets could become discoloured by the temperatures under a portable heater. If you are concerned about this, we recommend that you contact the carpet manufacturer for guidance. Alternatively, either stand the heater on a suitable base to shield the carpet or call our Helpline for further advice.

## Using the radiator

**THE HEATER CARRIES A WARNING 'DO NOT COVER' TO ALERT THE USER TO THE RISK OF FIRE THAT EXISTS IF THE HEATER IS ACCIDENTALLY COVERED.**

### Operation

When you have completed the installation, plug in and switch on the mains supply.

The mains neon indicator light will glow showing that power is available - see 'A' in **Fig. 3** and **Fig. 4**.

When the radiator is not in use, switch off the power supply and pull the plug out from the socket.

### Controls

#### Thermostat (see 'B' in **Fig. 3** and **Fig. 4**)

The thermostat controls the heat output according to the room temperature.

This ensures that the heater will not produce heat unnecessarily when the room is warm.

To set the temperature you require, turn the thermostat knob clockwise until the desired temperature is reached. Alternatively to heat a cold room quickly, turn the thermostat knob up fully.

When the room has reached the desired temperature, turn the thermostat knob anti-clockwise until the thermostat just clicks off.

The heater will now automatically operate at this temperature.

#### Mechanical Timer (TI models only)

Note: The timer clock will only operate when the product is connected to the mains supply

#### Operation modes

There are two operating modes on the timer, Manual operation and Auto operation. The operation mode is set using the slide switch on the timer - see **Fig 5**.


##### Manual operation (Position - I )

This setting allows power to the product uninterrupted by the timer, however other product controls will continue to function as normal.

##### Auto operation (Position - )

This setting allows the heater to be controlled by the timer. The product will be switched on and off depending on the pre-set timer program.

#### Setting the Time of Day

To set the time of day, rotate the timer dial clockwise (indicated by the arrow) until the correct time of day is opposite the reference mark  -

see **Fig. 5**. The 24-hour clock is used ; e.g. 4pm is '16' (16:00hrs).

## Setting the 'Auto' ON and OFF times

### To set the timer :


1. Using your finger tip or the tip of a pencil, push in as many segments as necessary around the dial, according to the times you don't require heat – see **Fig. 6**. Each segment pushed in switches the heater OFF for that part of the hour. All other segments will be ON. For example, **Fig. 6** shows the timer set to switch the heater OFF between 11pm and 1.45am.

2. You can select as many ON periods as you like, within the 24-hour day. The settings will repeat every day until changed.

3. To change ON and OFF times, simply push in any 'ON' segments you wish to cancel and pull out new 'ON' segments as required.

### Switching to Auto

Ensure the thermostat and/or the heat selector are set for the desired heat output.

Check that the clock shows the correct time of day. Set the mode slide switch to , the heater will switch ON and OFF according to the timer settings (see **Fig. 6**).

## IMPORTANT NOTES

Remember to observe all safety warnings when operating the heater on auto setting unattended or attended .

If the mains supply to the heater is interrupted, the timer clock will stop until power is restored ; reset the time of day to ensure correct ON and OFF times.

### Safety – Overheat Protection - all models

The heater is fitted with a thermal safety cut-out which will switch off the heater should it overheat for any reason. If the cut-out operates it is the result of abnormal overheating, and the Customer Services Helpline should be contacted for further advice.

### Cleaning

**WARNING – ALWAYS DISCONNECT FROM THE POWER SUPPLY AND ALLOW THE RADIATOR TO COOL BEFORE CLEANING.**

Do not use detergents, abrasive cleaning powder or polish of any kind on the body of the radiator, as these can damage the finish.

Wipe the radiator with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains.

Be careful not to allow moisture to enter the control box

### Recycling



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

### After Sales Service and Guarantee terms and conditions

Your product is guaranteed for 3 years from the date of purchase. If you experience a problem with our Dimplex product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Dimplex Guarantee will cover repair or - at the discretion of Dimplex- replacement with a functionally equivalent Dimplex product.

Within the guarantee period we undertake to repair or exchange this product free of charge providing:

a) Proof of purchase such as a sales receipt should be provided, showing that the appliance was bought within the 36-months prior to registering the defect/fault.

b) The appliance was correctly installed and operated in accordance with the manufacturer's instructions and used solely for domestic purposes.

c) The defect/fault was not as a result of accident, misuse, unauthorised modification or inexpert repair

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

If after following these steps your product still does not operate you should return it to your point of purchase. Please do not return a faulty product to us as this may result in loss or damage and delay in providing you with a satisfactory service.

Please retain your receipt as proof of purchase.

### What is not covered by a Dimplex Guarantee?

The Dimplex Guarantee does not cover any of the following: Any fault or damage to your Dimplex product due to faulty materials or workmanship occurring outside the [three year] Guarantee Period.

Normal wear and tear including parts that might wear out over time or consumables, such as [filters].

Any fault or damage occurring to any pre-owned Dimplex product or to any other equipment or property.

Accidental damage to your Dimplex product or damage to your Dimplex product from external sources (for example, transit, weather, electrical outages or power surges).

Fault or damage to your Dimplex product which is:

- not due to faulty materials or workmanship or which is due to circumstances outside Dimplex's control.
- caused by use of your Dimplex product for anything other than normal domestic household purposes in the country where it was purchased.
- caused by any misuse, abuse or negligent use of the Dimplex product, including but not limited to any failure to use it in accordance with the Operating Instructions supplied with the product.

- caused by any failure to assemble, install clean and maintain your Dimplex product in accordance with the Operating Instructions supplied with the product unless this was carried out by Dimplex or its authorised dealers.
- caused by repairs or alterations to your Dimplex product not carried out by Dimplex service personnel or its authorised dealer(s).

Please retain your receipt as proof of purchase.

### Terms and Conditions

The Dimplex Guarantee is valid for three calendar years from the date of purchase of your Dimplex product from a recognised retailer in the country of purchase and use, or the date of delivery of the product if later, always provided the original receipt has been retained and is produced as proof of purchase.

You must provide to Dimplex or its authorised agents on request the original receipt as proof of purchase and - if required by Dimplex - proof of delivery. If you are unable to provide this documentation, you will be required to pay for any repair work required.

Any repair work under the Dimplex Guarantee will be carried out by Dimplex or its authorised dealer(s) and any parts that are replaced will become the property of Dimplex. Any repairs performed under the Dimplex Guarantee will not extend the Guarantee Period.

Any replacement of your Dimplex product by Dimplex during the Guarantee Period will start the three-year Guarantee Period afresh from the date of delivery of the replacement Dimplex product to you.

The Dimplex Guarantee does not entitle you to recovery of any indirect or consequential loss or damage including but not limited to loss or damage to any other property.

The Dimplex Guarantee is in addition to your statutory rights as a consumer and your statutory rights are not affected by this Dimplex Guarantee.

### Contact Dimplex

If you have any questions about what the Dimplex Guarantee covers and does not cover or how to claim under the Dimplex Guarantee, please contact us:

Glen Dimplex Heating & Ventilation, Millbrook House, Grange Drive, Hedge End, Southampton SO30 2DF  
Telephone: 0344 879 3588

Email: [aftersales@dimplex.co.uk](mailto:aftersales@dimplex.co.uk)  
Visit: [www.dimplex.co.uk](http://www.dimplex.co.uk)

Model Identifier(s):		OFX750	OFX1000	OFX1500	OFX750TI	OFX1000TI	OFX1500TI	
<b>Heat output</b>								
Nominal heat output	P <sub>nom</sub>	0.75	1.0	1.5	0.75	1.0	1.5	kW
Minimum heat output (indicative)	P <sub>min</sub>	0.75	1.0	1.5	0.75	1.0	1.5	kW
Maximum continuous heat output	P <sub>max,c</sub>	0.75	1.0	1.5	0.75	1.0	1.5	kW
<b>Auxiliary electricity Consumption</b>								
At nominal heat output	e <sub>lmax</sub>	0.0	0.0	0.0	0.0	0.0	0.0	kW
At minimum heat output	e <sub>lmin</sub>	0.0	0.0	0.0	0.0	0.0	0.0	kW
In standby mode	e <sub>lSB</sub>	0.0	0.0	0.0	0.0	0.0	0.0	kW
<b>Type of heat output/ room temperature control</b>								
With mechanical thermostat room temperature control								Yes
<b>Contact Details</b>	Glen Dimplex Heating & Ventilation, Millbrook House, Grange Drive, Hedge End, Southampton, SO30 2DF							



Millbrook House  
Grange Drive  
Hedge End  
Southampton  
SO30 2DF

Customer Helpline: 0344 879 3588  
Email: [aftersales@dimplex.co.uk](mailto:aftersales@dimplex.co.uk)  
Website: [www.dimplex.co.uk](http://www.dimplex.co.uk)  
Republic of Ireland: 01 842 8222